

New Position of Lacanche Oven Reset Switch

If you have a relatively new Lacanche range, your electric oven reset switch can be accessed by removing the electric oven vent cover as shown in Figure 1.



Once the cover is removed, press the oven reset switch as shown in Figure 2.



If your reset switch is not under the electric oven vent cover, you will need to lift the top of your range to access it. A video describing how to do this can be found on Art Culinaire's support web page, www.frenchranges.com/support, in the After Sales Service section.