
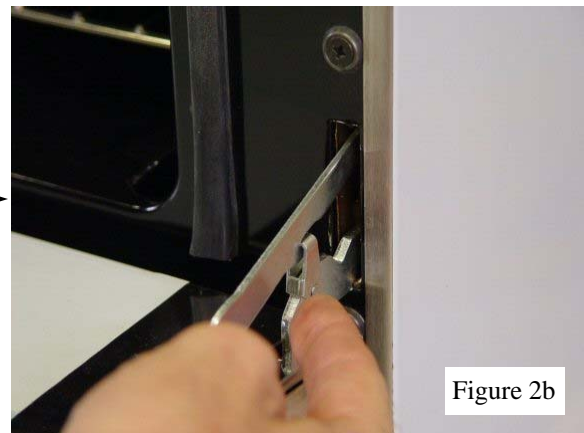
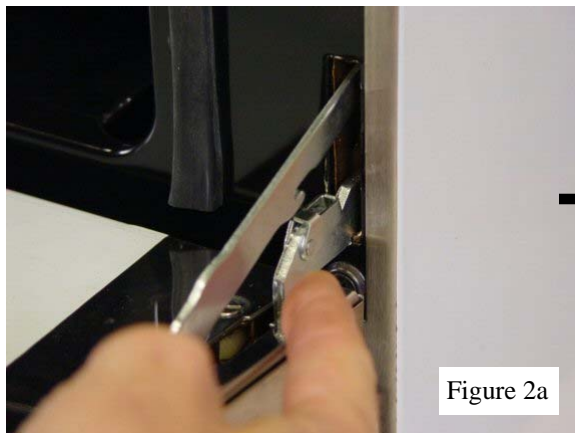
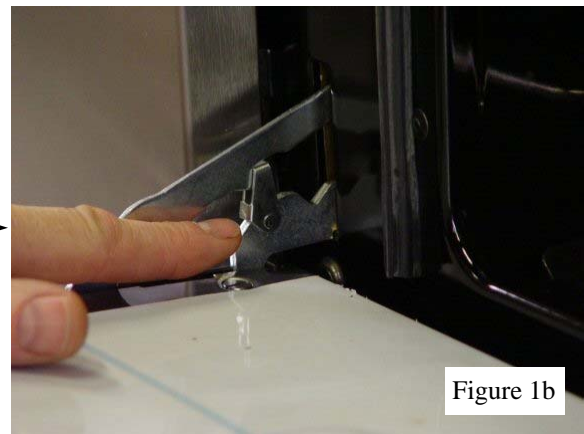


Lacanche Oven Door Panel Replacement

for large oven doors (Sully, Fontenay, Cormatin, Volnay)
and Cluny 1400 doors

1. Open the oven door and rotate the hinge clips up to lock the hinges in place. (Figures 1 and 2)

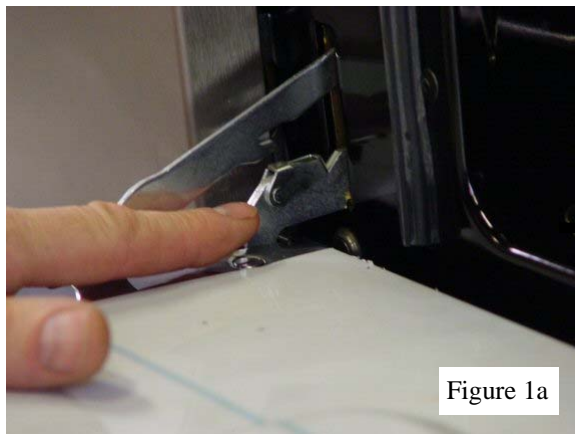

2. Lift and remove the oven door from the chassis. (Figure 3)



Figure 3

Note: **DO NOT** remove the hinge screws. These hold the hinges on and do not attach to the front panel. (Figures 4 and 5)



Figure 4

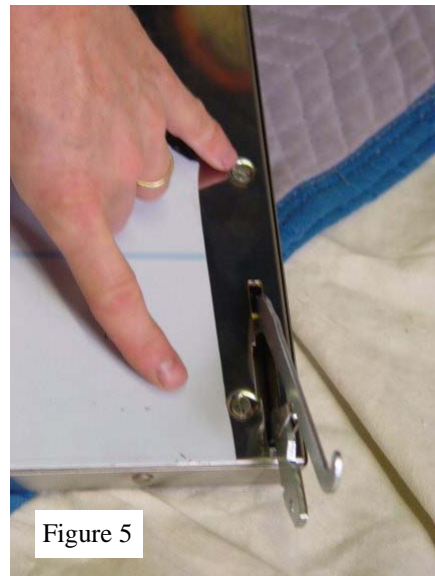


Figure 5

3. Remove the two or three screws from the bottom of the oven door. (Figure 6)






Figure 6

4. Gently pry the front panel away from the rest of the oven door until it is completely separated. (Figure 7)



Figure 7

5. Remove the two metric bolts that hold the oven bar to the oven door. (Figures 8 and 9)
6. If the oven door has a logo, remove the two 7mm nuts that hold the Lacanche logo to the oven door. (Figure 11)

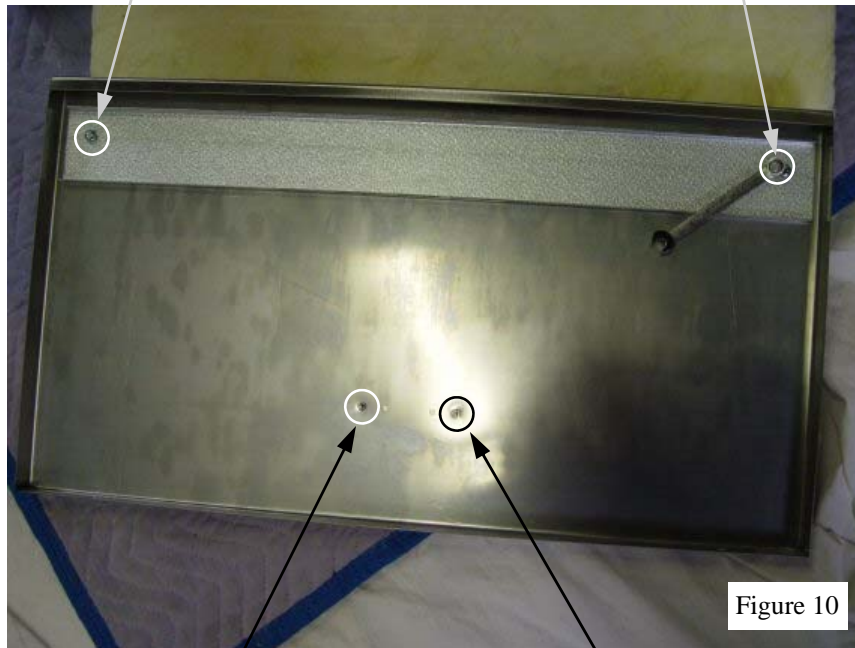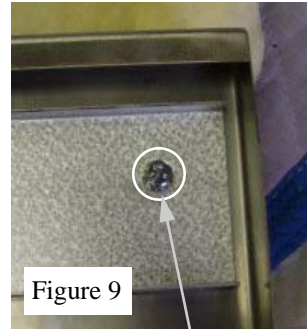
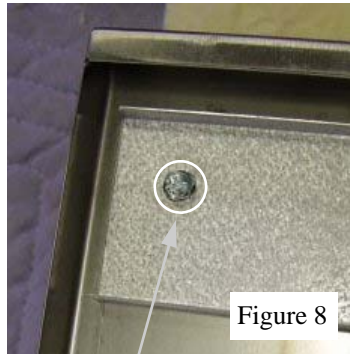


Lacanche Oven Door Panel Replacement for oven doors on the Cluny 1000mm chasis

Note: This oven door panel (Figure 12) is removed differently than the oven door panels previously shown.



1. Remove the two screws from the back top of the oven door. (Figure 14)

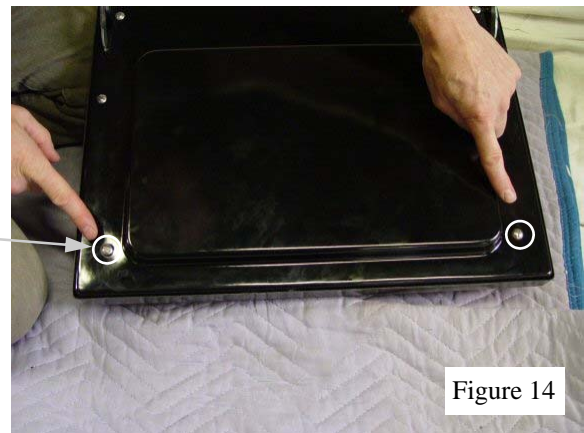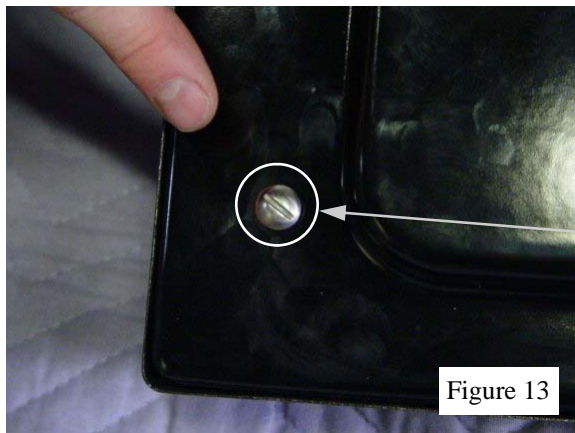


Note: **DO NOT** remove the four bottom hinge plate screws.


2. Gently pry the front panel away from the rest of the oven door until it is completely separated. (Figure 15)



3. Remove the two brass coupler adapters that hold the oven door bar to the oven door. (Figures 16 and 17)

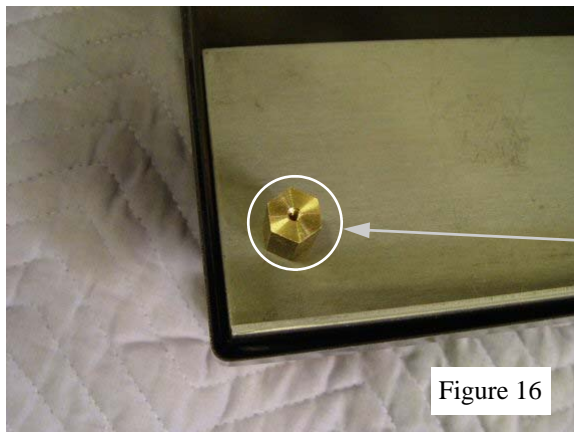

Note: The brass coupler adapter (Figure 18) is fragile. Do not over-tighten it when reassembling the panel.

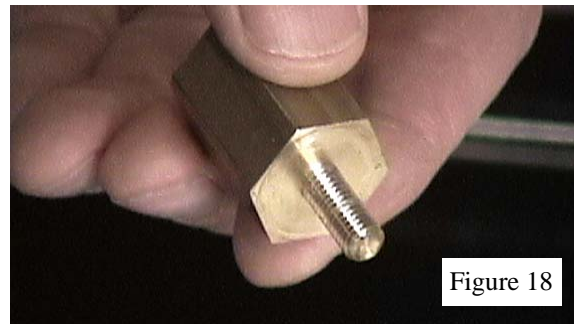

Note: Over-tightening the brass coupler adapter could fracture the enamel on the front panel. (Figure 19)



4. Be sure to insert the bottom tabs (Figure 20) into the bottom slots (Figure 21) when reassembling the oven door.



Lacanche Bottom Drawer Panel Replacement

1. After removing the drawer from the range, remove the four nuts (two on each end) from the drawer. (Figure 22)
2. Remove the two knobs.



Figure 22