

# Top Burner Flame Adjustment

After initial connection or change of gas, it is **crucial** to modify this adjustment.

- Light the burner; adjust knob to minimum setting, remove the control knob, move/rotate the ignition switch to expose the adjustment screw **J** and then use a small flathead screwdriver to set the screw. You will see the flame reduce or increase in size as you turn the screw.

**Note:** Flame is reduced to  $\frac{1}{4}$  of its size in the minimum setting; the burner must remain lit when changing from maximum setting to minimum setting.

