



## Island Spacer Installation

Written for range models manufactured between 1995-2010 (Gen. 1-3)

The 2 3/4" (70mm) deep Island Back Spacer is fastened to the back of the range's cooktop by two or more C-clamps depending on the width of the range. Simply attach the spacer and push the range up against the back wall.



The island back Spacer must be used with a noncombustible flame-retardant backsplash material (tile, metal, stone, etc.) installed on the wall above the cooking surface.





Since the height of the range is adjustable, the spacer should be able to slide just under the backsplash material at the exact height of the counter surface (fig.A). **Do not grout or cement** the spacer into place! The range must retain the ability to pull away from the wall for future service needs.

Art Culinaire | 1701 1st Street, Snohomish, WA 98290 | support@frenchranges.com | 1.888.222.2930 1 of 1