



Door Hinge Receiver Replacement

Written for ranges manufactured after 2001 with horizontal main oven doors.

1. Review the oven door removal video, then remove the oven door from the range chassis. Follow this webpage link - https://www.frenchranges.com/resource/oven-door-removalinstall/







Remove the drawer below the oven, then reach up through the open drawer cavity and grasp the back of the hinge receivers while removing the mounting screws above and below the hinge receiver opening.





Remove and replace the hinge receivers with the new hardware supplied. The correct orientation of the hinge receivers will have the rollers at the top of the hinge slot.





4. Screw the new receivers into place using the new hardware supplied. Carefully start the new screws by hand, then tighten firmly with tools.





5. Re-install the drawer and the oven door.





Art Culinaire | 1701 1st Street, Snohomish, WA 98290 | support@frenchranges.com | 1.888.222.2930

DHRR Ver.2.0-2025