



2 Point Spark Module Replacement

After you open the cooktop and remove the lid to the electrical panel, follow the wiring from the problem igniters to the faulty spark module. You may have to remove the overlimit safety switch by removing the two Philips screws found on the top of the electrical panel top.

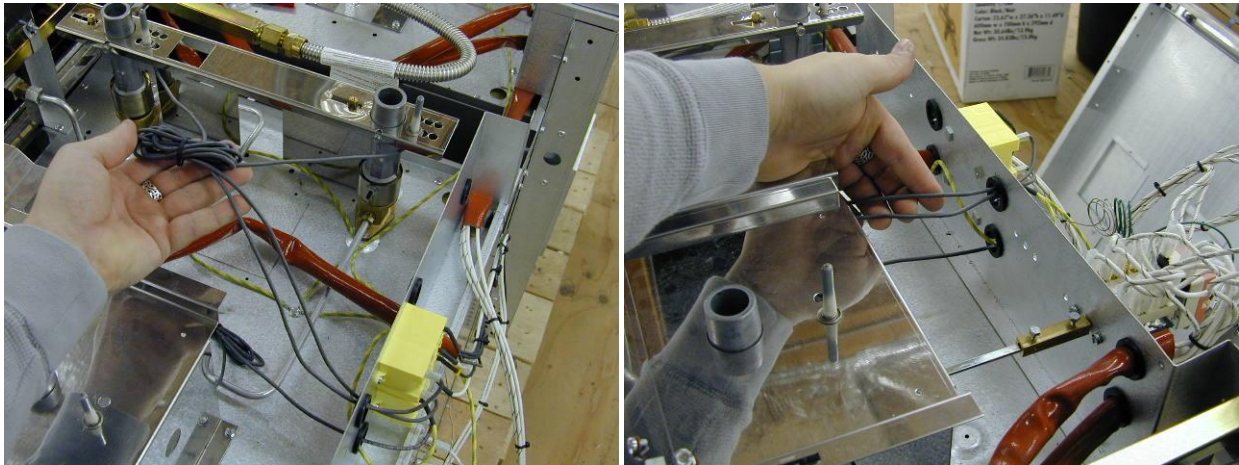

Loosen the square backing nuts with a pair of pliers or an adjustable wrench to release the module.

You may have to remove the electric oven knob shaft and all four 7mm hex screws to detach the front part of the electrical panel enough to remove the spark module screws.

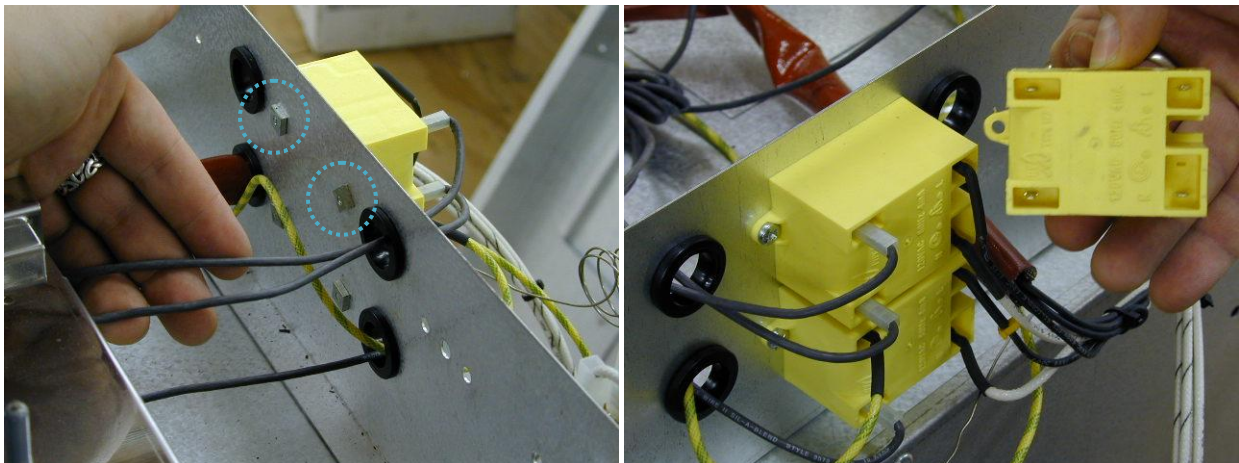

Swap wire leads one at a time as not to confuse individual wire locations. That's it, assemble in reverse order.